

## 7. Parts catalog

### How to use this parts catalog


The following legend is used in the parts catalog:

| Asm-Index | Part number | Units/mach | Units/FRU | Description |
|-----------|-------------|------------|-----------|-------------|
|-----------|-------------|------------|-----------|-------------|

- **Asm-index:** identifies the assembly and the item in the diagram. For example, 3-1 indicates assembly 3 and the item number 1.
- **Part number:** identifies the unique number that identifies this FRU.
- **Units/mach:** refers to the number of units actually used in the machine or product.
- **Units/FRU:** refers to the number of units packaged together and identified by the part number.
- **NS:** (Not shown) in the Asm-Index column indicates that the part is procurable but is not pictured in the illustration.
- **PP:** (Parts Packet) in the parts description column indicates the part is contained in a parts packet.
- Model information used in the parts catalog.

| Machine type and model | Description         |
|------------------------|---------------------|
| 4513-200, -220         | Lexmark E260, E260d |
| 4513-230               | Lexmark E260dn      |


## Assembly 1: Covers

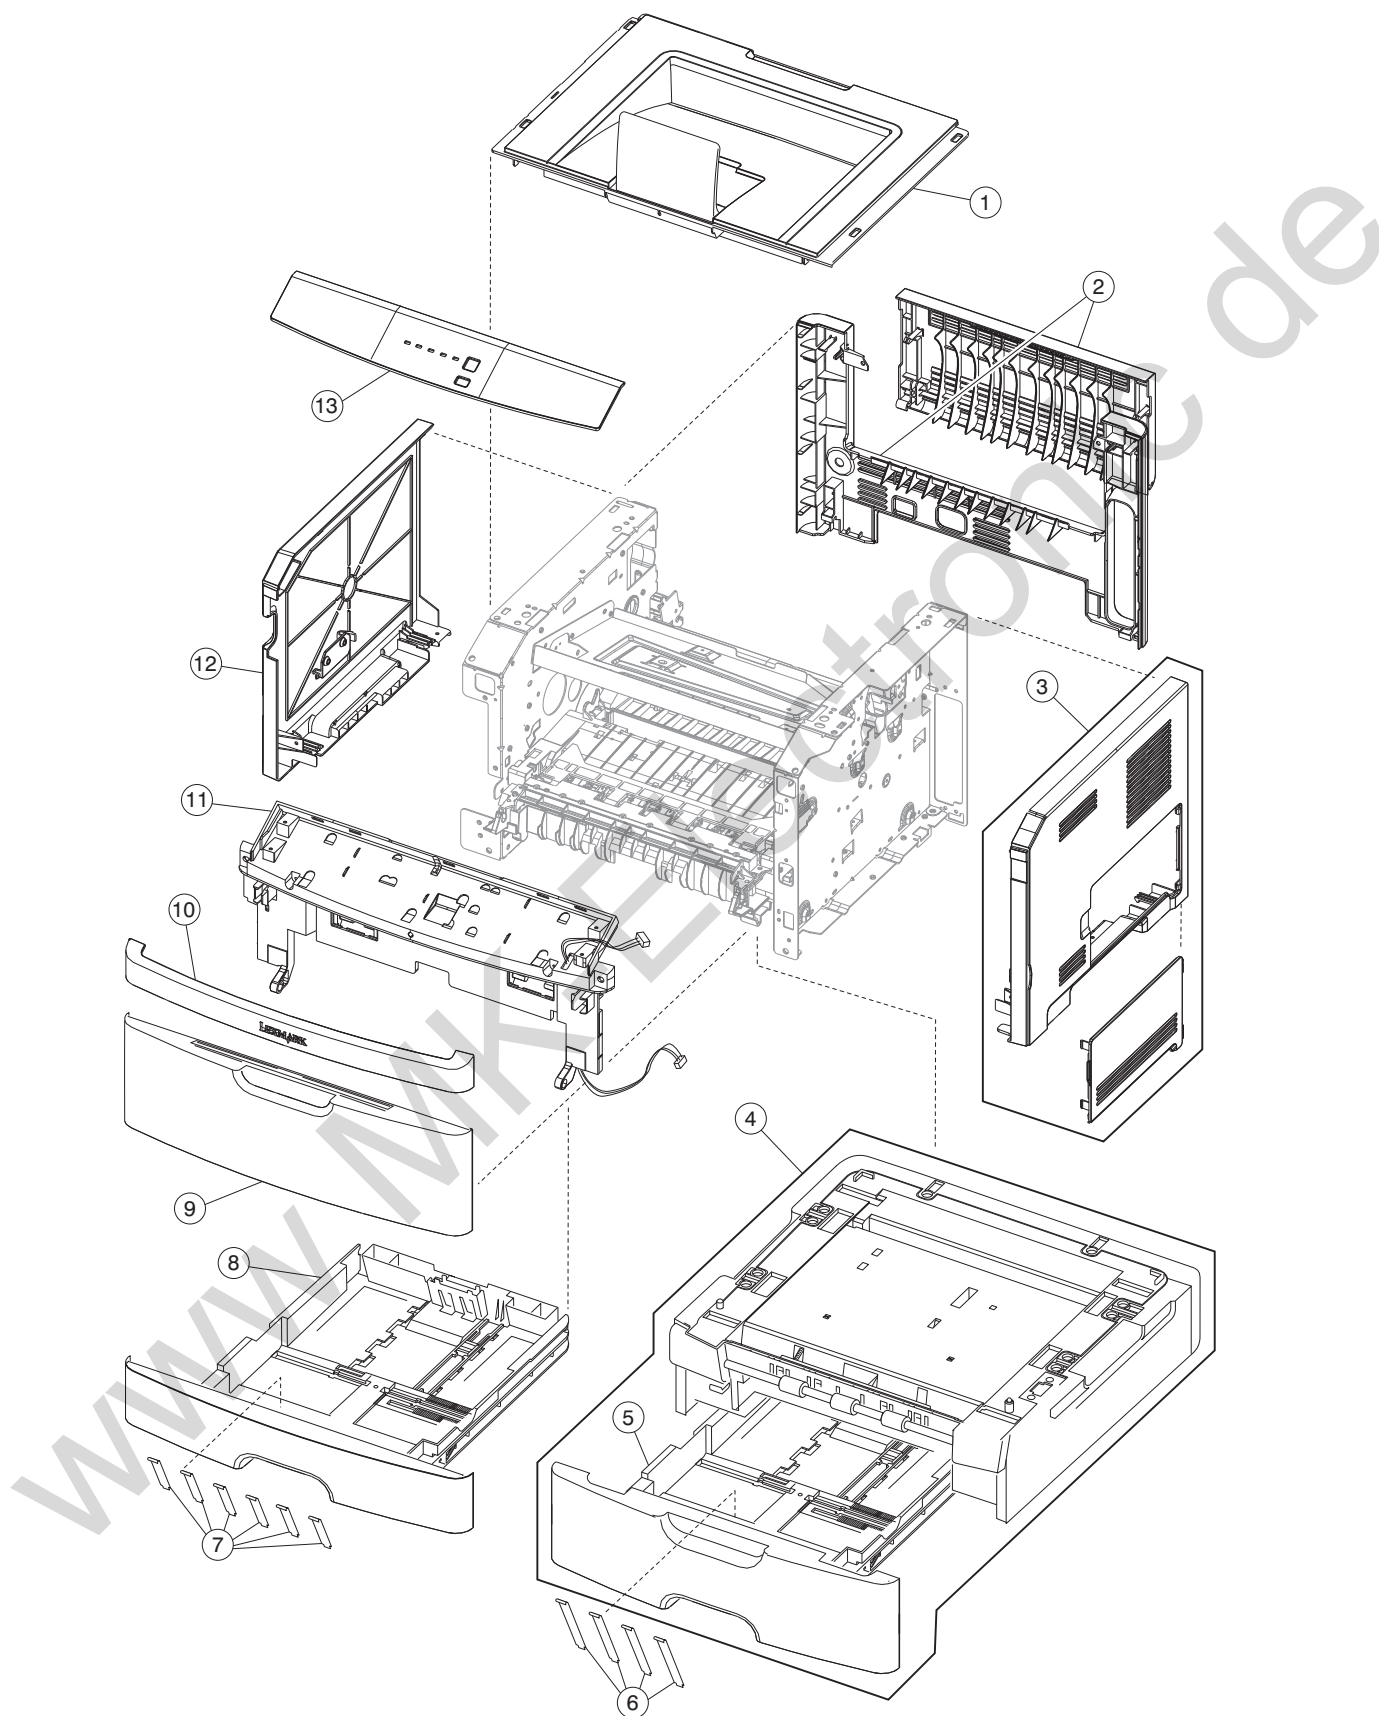

## Assembly 1: Covers

| Asm-Index | Part number | Units/mach | Units/FRU | Description                                         |
|-----------|-------------|------------|-----------|-----------------------------------------------------|
| 1-1       | 40X5373     | 1          | 1         | Top cover assembly                                  |
| 2         | 40X5377     | 1          | 1         | Rear upper and lower cover assembly                 |
| 3         | 40X5375     | 1          | 1         | Right side cover                                    |
| 4         | 40X5398     | 1          | 1         | Optional 250-sheet tray                             |
| 4         | 40X5399     | 1          | 1         | Optional 550-sheet tray                             |
| 5         | 40X5394     | 1          | 1         | 250-sheet (Tray 2) assembly                         |
| 5         | 40X5395     | 1          | 1         | 550-sheet (Tray 2) assembly                         |
| 6         | 40X2855     | 1          | 4         | Tray 2 wear strips (550-sheet tray only)            |
| 7         | 40X5382     | 1          | 6         | Wear strips (250-sheet trays, optional and primary) |
| 8         | 40X5381     | 1          | 1         | Primary tray                                        |
| 9         | 40X5379     | 1          | 1         | Front door cover                                    |
| 10        | 40X5359     | 1          | 1         | Nameplate cover                                     |
| 11        | 40X5378     | 1          | 1         | Front access door assembly                          |
| 12        | 40X5374     | 1          | 1         | Left side cover                                     |
| 13        | 40X5353     | 1          | 1         | LED bezel cover, E260d                              |
| 13        | 40X5389     | 1          | 1         | LED bezel cover, E260dn                             |
| 13        | 40X5393     | 1          | 1         | LED bezel cover, E260 (non duplex, EMEA only)       |


## Assembly 2: Electronics

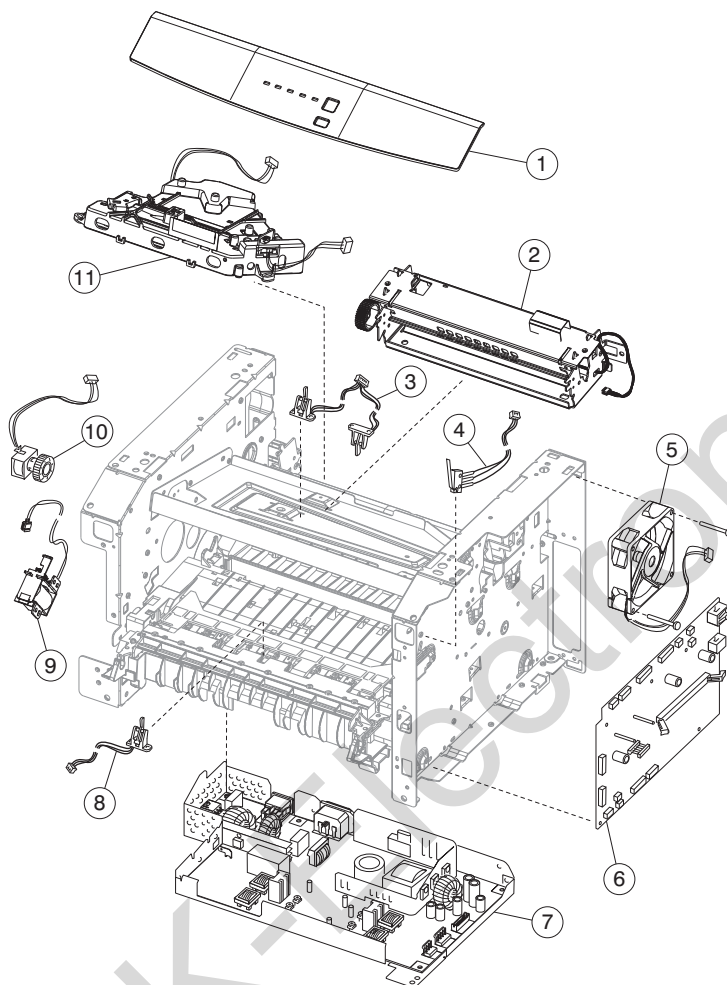

**Assembly 2: Electronics**

| Asm-Index | Part number | Units/mach | Units/FRU | Description                                    |
|-----------|-------------|------------|-----------|------------------------------------------------|
| 2-1       | 40X5352     | 1          |           | LED operator panel assembly, E260/E260d/E260dn |
| 2         | 40X5344     | 1          |           | Fuser assembly, 115 V                          |
| 2         | 40X5345     | 1          |           | Fuser assembly, 230 V                          |
| 2         | 40X5346     | 1          |           | Fuser assembly, 100 V                          |
| 3         | 40X5365     | 1          | 1         | Duplex and media sensor assembly               |
| 4         | 40X5360     | 1          | 1         | Access door open sensor assembly               |
| 5         | 40X5392     | 1          | 1         | Cooling fan (screws included)                  |
| 6         | 40X5347     | 1          | 1         | Controller board, E260, E260d                  |
| 6         | 40X5348     | 1          | 1         | Controller board, E260dn                       |
| 7         | 40X5361     | 1          |           | LVPS/HVPS card assembly, 110 V/100 V           |
| 7         | 40X5362     | 1          |           | LVPS/HVPS card assembly, 220 V                 |
| 8         | 40X5366     | 1          | 1         | Manual input sensor assembly                   |
| 9         | 40X5369     | 1          | 1         | Manual feed solenoid                           |
| 10        | 40X5370     | 1          | 1         | Media feed (ACM) clutch                        |
| 11        | 40X5387     | 1          |           | LSU, E260/E260d/E260dn (printhead)             |

## Assembly 3: Frame

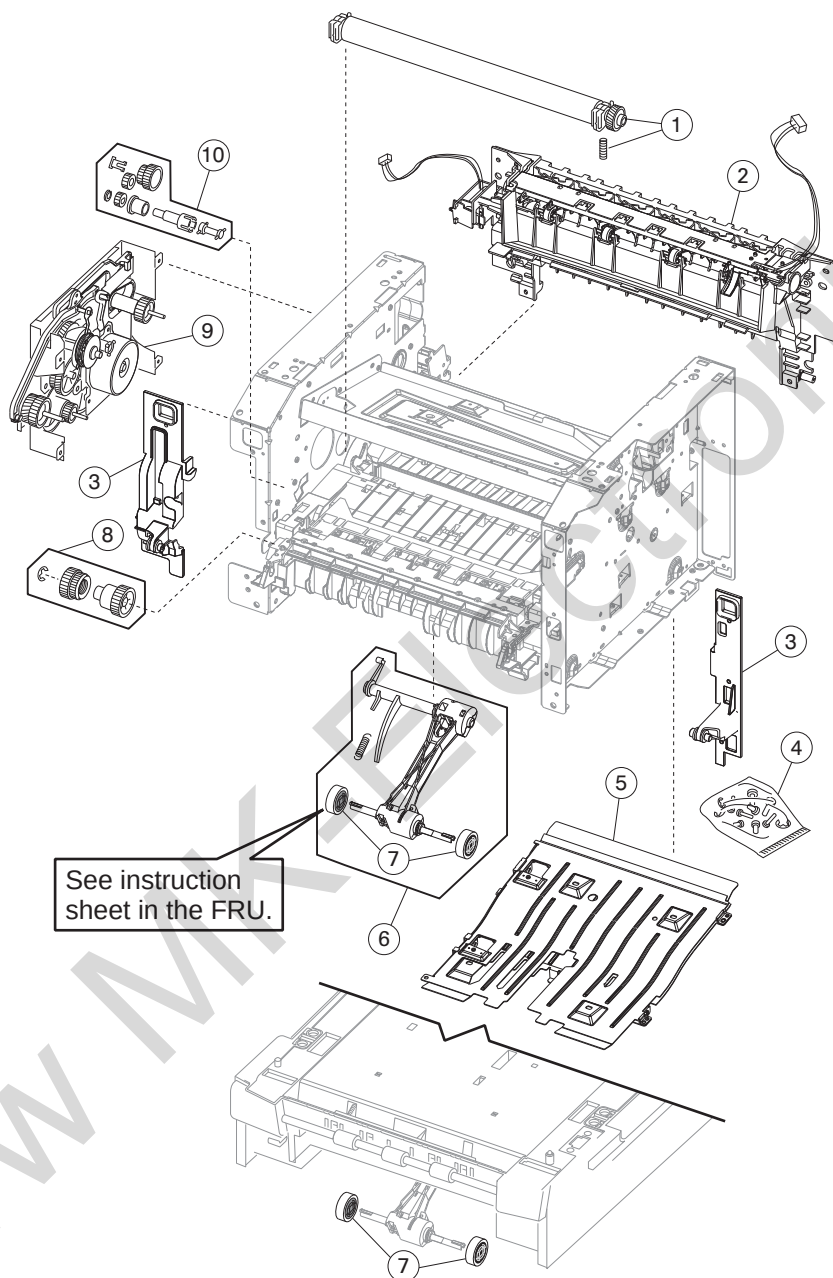

**Assembly 3: Frame**

| Asm-Index | Part number | Units/mach | Units/FRU | Description                                  |
|-----------|-------------|------------|-----------|----------------------------------------------|
| 3-1       | 40X5364     | 1          |           | Transfer roll, bearings, gear, spring (CBM)  |
| 2         | 40X5372     | 1          |           | Media exit guide assembly (redrive)          |
| 3         | 40X5397     | 1          | 1         | Front mounts                                 |
| 4         | 40X5396     | N/A        |           | Screws, miscellaneous                        |
|           |             |            | 4         | TP2NCX3X6PF-Ni                               |
|           |             |            | 4         | TP2C-4.0+8PF-Ni                              |
|           |             |            | 4         | M3.0*0.5+6PF-Ni                              |
|           |             |            | 2         | M3.0*0.5+4PF-Ni                              |
|           |             |            | 2         | M3.5*0.6+6P-Ni                               |
| 5         | 40X5380     | 1          | 1         | Complete duplex assembly (E260d/E260dn only) |
| 6         | 40X5453     | 1          | 1         | Media (ACM) drive assembly                   |
| 7         | 40X5451     | 2          | 2         | Paper feed, ACM tires                        |
| 7         | 40X5440     | 1          | 2         | Tray 2 paper feed tires                      |
| 8         | 40X5368     | 1          | 1         | Manual feed clutch CBM                       |
| 9         | 40X5367     | 1          | 1         | Main drive gearbox (in motor)                |
| 10        | 40X5363     | 1          | 1         | Duplex gear drive CBM (E260d/E260dn only)    |
| NS        | 7470094     | 1          |           | Field relocation package assembly            |

**Assembly 4: Options**

| Asm-Index | Part number | Units/mach | Units/FRU | Description                            |
|-----------|-------------|------------|-----------|----------------------------------------|
| NS        | 40X5972     | 1          |           | Japanese font card assembly            |
| NS        | 40X5970     | 1          |           | Simplified Chinese font card assembly  |
| NS        | 40X5971     | 1          |           | Traditional Chinese font card assembly |
| NS        | 40X5969     | 1          |           | Korean font card assembly              |
| NS        | 40X5937     | 1          |           | 128 MB SDR DIMM                        |
| NS        | 40X1367     | 1          |           | Parallel cable, packaged (3 m)         |
| NS        | 40X1368     | 1          |           | USB cable, packaged (2 m)              |

## Assembly 5: Power cords

| Asm-Index | Part number | Units/mach | Units/FRU | Description                                      |
|-----------|-------------|------------|-----------|--------------------------------------------------|
| NS        | 40X0297     | 1          |           | Power cord, 1.8M (straight)– USA, Canada         |
| NS        | 40X0278     | 1          |           | Power cord, 6 foot (straight)– Europe and others |
| NS        | 40X0288     | 1          |           | Power cord, 8 foot (straight)– Argentina         |
| NS        | 40X0286     | 1          |           | Power cord, 8 foot (straight)– United Kingdom    |
| NS        | 40X0275     | 1          |           | Power cord, 6 foot (straight)– Israel            |
| NS        | 40X0274     | 1          |           | Power cord, 6 foot (straight)– Switzerland       |
| NS        | 40X0276     | 1          |           | Power cord, 6 foot (straight)– South Africa      |
| NS        | 40X0287     | 1          |           | Power cord, 6 foot (straight)– Traditional Italy |
| NS        | 40X0279     | 1          |           | Power cord, 6 foot (straight)– Denmark           |
| NS        | 40X0277     | 1          |           | Power cord, 6 foot (straight)– Brazil            |
| NS        | 40X0282     | 1          |           | Power cord, 1.8M (straight)– PRC                 |
| NS        | 40X0270     | 1          |           | Power cord, 2.5M (straight)– Japan               |
| NS        | 40X0280     | 1          |           | Power cord, 1.8M (straight)– Korea               |
| NS        | 40X0281     | 1          |           | Power cord, 1.8M (straight)– Taiwan              |
| NS        | 40X0296     | 1          |           | Power cord, 1.8M (straight)– Australia           |

www MK-Electronic.de

# Index

## A

abbreviations **1-9**  
 acronyms **1-9**  
 Auto CR After LF **3-5**  
 Auto LF After CR **3-5**

## C

compatibility **1-4**  
 configuration ID **3-8**  
 configuration menu—  
   accessing **3-1**  
   navigating menu **3-1**  
 Network  
   Mac Binary PS **3-7**  
   NPA Mode **3-7**  
   Set Card Speed **3-7**  
 Parallel  
   MAC Binary PS **3-5**  
   NPA Mode **3-5**  
   Parallel Mode 2 **3-5**  
   Protocol **3-5**  
 printing menu **3-2**  
 Setup  
   Auto CR After LF **3-5**  
   Auto LF After CR **3-5**  
   Demo Mode **3-5**  
 table of light patterns **3-2**  
 USB  
   Mac Binary PS **3-6**  
   NPA Mode **3-6**  
 Utilities  
   Hex Trace **3-4**  
   Print Quality Pages **3-4**  
   Reset Factory Defaults **3-4**  
   Reset Photoconductor Counter **3-4**  
 control panel **1-2**  
 controller card  
   service check **2-51**

## D

Defaults **3-8**  
 Demo Mode **3-5**  
 diagnostic information **2-1**  
 diagnostics mode— **3-1**  
   Development  
     Configuration ID **3-8**  
     Defaults **3-8**  
     Edge to Edge **3-8**  
     Print History **3-8**  
 printout sample **3-3**

## E

Edge to Edge **3-8**  
 error messages  
   primary light patterns **2-3**  
   service error codes **2-28, 2-42**  
   user attendance messages **2-3**  
 ESD-sensitive parts **4-1**

## F

fan  
   parts catalog **7-5**  
   service check **2-52**  
 frame, parts catalog **7-6**  
 fuser  
   parts catalog **7-5**  
   service check **2-53**

## H

handling ESD-sensitive parts **4-1**  
 Hex Trace **2-48, 3-4**

## L

light patterns—  
   description **2-3**  
   primary **2-4**  
   service codes **2-28**  
 locations  
   front views **5-1**  
   rear views **5-1**  
 lubrication specifications **6-1**  
 LVPS/HVPS  
   parts catalog **7-5**  
   service check **2-54**

## M

menus  
   configuration menu **3-2**  
   diagnostics mode **3-3**  
   printing **3-1**  
 messages  
   service error codes **2-28, 2-42**  
   user attendance messages **2-4**  
 models  
   comparison **1-1**  
   diagrams **5-1**  
   operator panels **1-2**  
   service menus **3-1**  
   trays available **1-5**

## N

NPA Mode **3-5**

## O

- operator panel
  - LED—
    - service check **2-55**
  - overview **1-2**

## P

- panel, control **1-2**
- paper jams
  - tips on preventing **1-7**
- parallel port service check **2-57**
- parts catalog
  - covers **7-2**
  - electronics **7-4**
  - frame **7-6**
  - options **7-8**
- power-on self test (POST) **2-2**
  - symptoms **2-49**
- print history **3-8**
- print media
  - preventing jams **1-7**
  - trays by model **1-5**
  - types and sizes **1-6**
- print quality pages **3-4**
  - using **2-58**
- print quality problems
  - print media **1-7**
  - service check **2-58**
  - solving **2-62**
- printer symptom table **2-50**
- printhead
  - service check **2-65**
- Protocol **3-5**

## R

- removals
  - covers
    - front access cover **4-6**
  - procedures **4-2**
- Reset Factory Defaults **3-4**
- reset maintenance page counter **3-4**
- Reset PC Counter **3-4**

## S

- safety information **iii**
- safety inspection guide **6-1**
- service checks **2-51**
  - controller card **2-51**
  - cooling fan **2-52**
  - cover interlock switch **2-52**
  - dead machine **2-53**
  - fuser **2-53**
  - LVPS/HVPS **2-54**
  - main motor **2-54**
  - operator panel **2-55**
  - paper feed **2-55**
    - paper jam during POST **2-55**
    - paper never picks **2-56**
  - paper picks but stops **2-56**
  - paper picks during POST **2-55**
  - paper picks sheets **2-56**
  - paper trees, curls **2-57**

- parallel port **2-57**
- print quality **2-58**
  - black page **2-59**
  - blank page **2-58**
  - heavy background **2-59**
  - image density **2-60**
  - light print **2-61**
  - partial blank image **2-60**
  - poor fusing of image **2-60**
  - toner on back of page **2-61**
  - white or black lines **2-61**
- printhead **2-65**
- transfer roll **2-65**
- service error codes **2-42**
  - accessing **2-28**
  - tertiary light patterns **2-30**
- service menus **3-1**
- special tools **1-8**
- specifications
  - connectivity **1-4**
  - input trays **1-5**
  - memory **1-3**
  - operating systems **1-4**
  - photoconductor capacity **1-5**
  - print media **1-6**
  - toner capacity **1-5**
- start **2-1**
- symptom tables **2-49**
  - POST **2-49**
  - printer **2-50**

## T

- test pages
  - Print Quality Pages **3-4**
- tools **1-8**
- transfer roll
  - parts catalog **7-7**
  - service check **2-65**

## U

- user attendance messages **2-4**

## Part number index

|         |                                                     |     |
|---------|-----------------------------------------------------|-----|
| 40X0270 | Power cord, 1.77M (straight)– Japan                 | 7-9 |
| 40X0274 | Power cord, 6 foot– Switzerland                     | 7-9 |
| 40X0275 | Power cord, 6 foot (straight)– Israel               | 7-9 |
| 40X0276 | Power cord, 6 foot– South Africa                    | 7-9 |
| 40X0277 | Power cord, 6 foot (straight)– Brazil               | 7-9 |
| 40X0278 | Power cord, 6 foot (straight)– Europe and others    | 7-9 |
| 40X0279 | Power cord, 6 foot (straight)– Denmark              | 7-9 |
| 40X0280 | Power cord, 1.77M (straight)– Korea                 | 7-9 |
| 40X0281 | Power cord, 1.77M (straight)– Taiwan                | 7-9 |
| 40X0282 | Power cord, 1.77M (straight)– PRC                   | 7-9 |
| 40X0286 | Power cord, 6 foot– United Kingdom                  | 7-9 |
| 40X0287 | Power cord, 6 foot (straight)– Traditional Italy    | 7-9 |
| 40X0288 | Power cord, 6 foot– Argentina                       | 7-9 |
| 40X0296 | Power cord, 1.8M (straight)– Australia              | 7-9 |
| 40X0297 | Power cord, 1.77M (straight)– USA, Canada           | 7-9 |
| 40X1367 | Parallel cable, packaged (3 m)                      | 7-8 |
| 40X1368 | USB cable, packaged (2 m)                           | 7-8 |
| 40X2855 | Tray 2 wear strips (550-sheet tray only)            | 7-3 |
| 40X5344 | Fuser assembly, 115 V                               | 7-5 |
| 40X5345 | Fuser assembly, 230 V                               | 7-5 |
| 40X5346 | Fuser assembly, 100 V                               | 7-5 |
| 40X5347 | Controller board, E260, E260d                       | 7-5 |
| 40X5348 | Controller board, E260dn                            | 7-5 |
| 40X5352 | LED operator panel assembly, E260/E260d/E260dn      | 7-5 |
| 40X5353 | LED bezel cover, E260d                              | 7-3 |
| 40X5359 | Nameplate cover                                     | 7-3 |
| 40X5360 | Access door open sensor assembly                    | 7-5 |
| 40X5361 | LVPS/HVPS card assembly, 110 V/100 V                | 7-5 |
| 40X5362 | LVPS/HVPS card assembly, 220 V                      | 7-5 |
| 40X5363 | Duplex gear drive CBM (E260d/E260dn only)           | 7-7 |
| 40X5364 | Transfer roll, bearings, gear, spring (CBM)         | 7-7 |
| 40X5365 | Duplex and media sensor assembly                    | 7-5 |
| 40X5366 | Manual input sensor assembly                        | 7-5 |
| 40X5367 | Main drive gearbox (in motor)                       | 7-7 |
| 40X5368 | Manual feed clutch CBM                              | 7-7 |
| 40X5369 | Manual feed solenoid                                | 7-5 |
| 40X5370 | Media feed (ACM) clutch                             | 7-5 |
| 40X5372 | Media exit guide assembly (redrive)                 | 7-7 |
| 40X5373 | Top cover assembly                                  | 7-3 |
| 40X5374 | Left side cover                                     | 7-3 |
| 40X5375 | Right side cover                                    | 7-3 |
| 40X5377 | Rear upper and lower cover assembly                 | 7-3 |
| 40X5378 | Front access door assembly                          | 7-3 |
| 40X5379 | Front door cover                                    | 7-3 |
| 40X5380 | Complete duplex assembly (E260d/E260dn only)        | 7-7 |
| 40X5381 | Primary tray                                        | 7-3 |
| 40X5382 | Wear strips (250-sheet trays, optional and primary) | 7-3 |
| 40X5387 | LSU, E260/E260d/E260dn (printhead)                  | 7-5 |
| 40X5389 | LED bezel cover, E260dn                             | 7-3 |
| 40X5392 | Cooling fan (screws included)                       | 7-5 |
| 40X5393 | LED bezel cover, E260 (non duplex, EMEA only)       | 7-3 |
| 40X5394 | Tray 2 assembly                                     | 7-3 |
| 40X5395 | 550-sheet (Tray 2) assembly                         | 7-3 |

|         |                                        |     |
|---------|----------------------------------------|-----|
| 40X5396 | Screws, miscellaneous                  | 7-7 |
| 40X5397 | Front mounts                           | 7-7 |
| 40X5398 | Optional 250-sheet tray                | 7-3 |
| 40X5399 | Optional 550-sheet tray                | 7-3 |
| 40X5440 | Tray 2 paper feed tires                | 7-7 |
| 40X5451 | Paper feed, ACM tires                  | 7-7 |
| 40X5453 | Media (ACM) drive assembly             | 7-7 |
| 40X5937 | 128 MB SDR DIMM                        | 7-8 |
| 40X5969 | Korean font card assembly              | 7-8 |
| 40X5970 | Simplified Chinese font card assembly  | 7-8 |
| 40X5971 | Traditional Chinese font card assembly | 7-8 |
| 40X5972 | Japanese font card assembly            | 7-8 |
| 7470094 | Field relocation package assembly      | 7-7 |